




Universal Trim-to-Fit Cable Kit

The universal parking brake cables can be installed two different ways. You will need to determine the best installation type for your application.


Installation Type 1:

Use the included cable splices to splice into your stock parking brake cables.

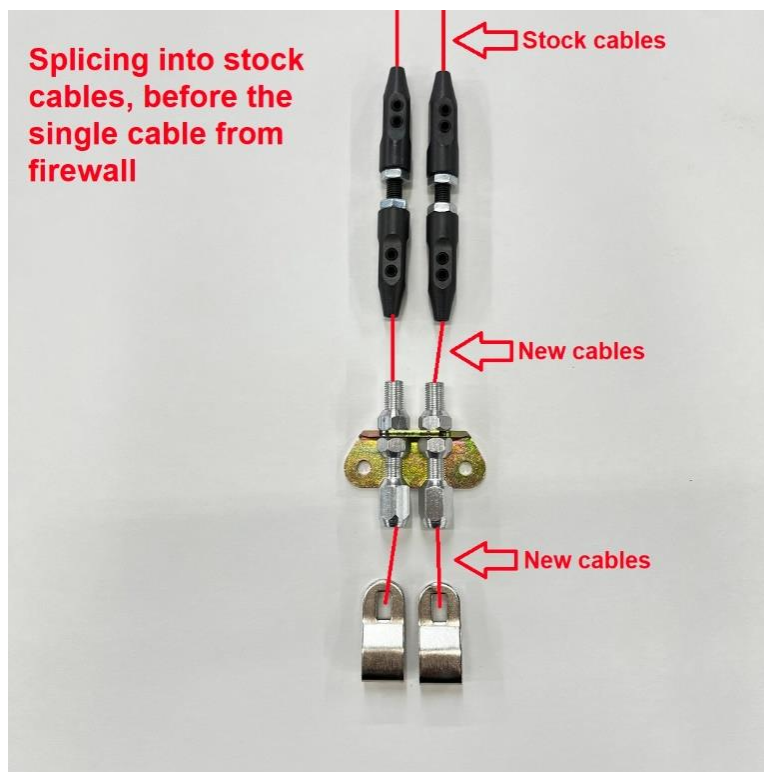

Installation Type 2:

Run each new rear wheel cable up to the factory junction point and use the included junction block. You will insert the stock single cable into the center of the block, then add the separate rear cables into the side of the block.

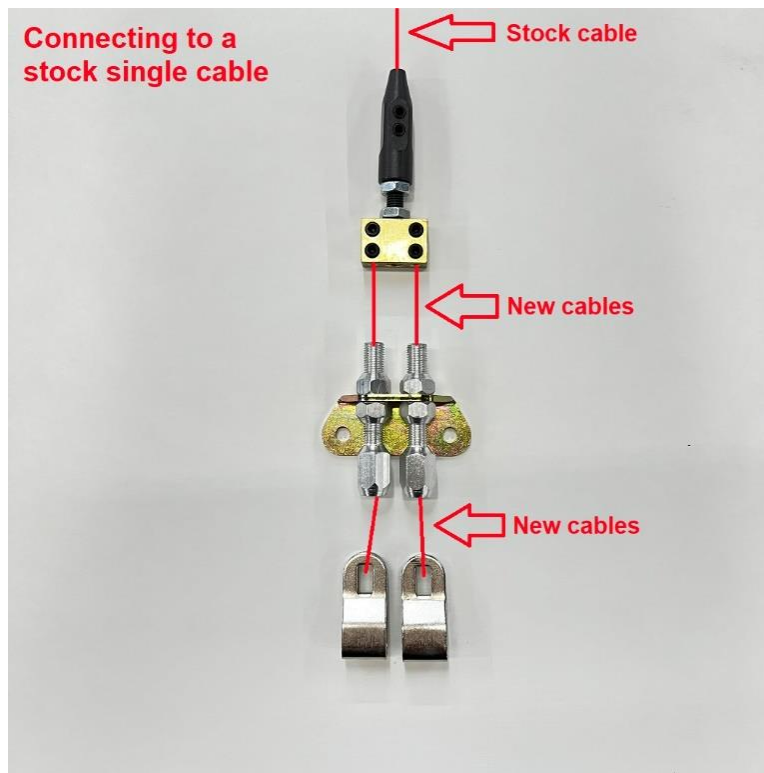

Cable Install



Install the clevises onto the inner wires by sliding the end of the inner wire without the ball end on it through the 1/8" hole from inside the U-shaped part of the clevis. Pull the inner wire through the clevis until the brake cable ball on the end of the inner wire stops inside the clevis. The slotted end of the lever can be installed over the lever at this time.

For any questions or suggestions please [CONTACT US](#)

