




Universal Trim-to-Fit Cable Kit

The universal parking brake cables can be installed two different ways. You will need to determine the best installation type for your application.


Installation Type 1:

Use the included cable splices to splice into your stock parking brake cables.

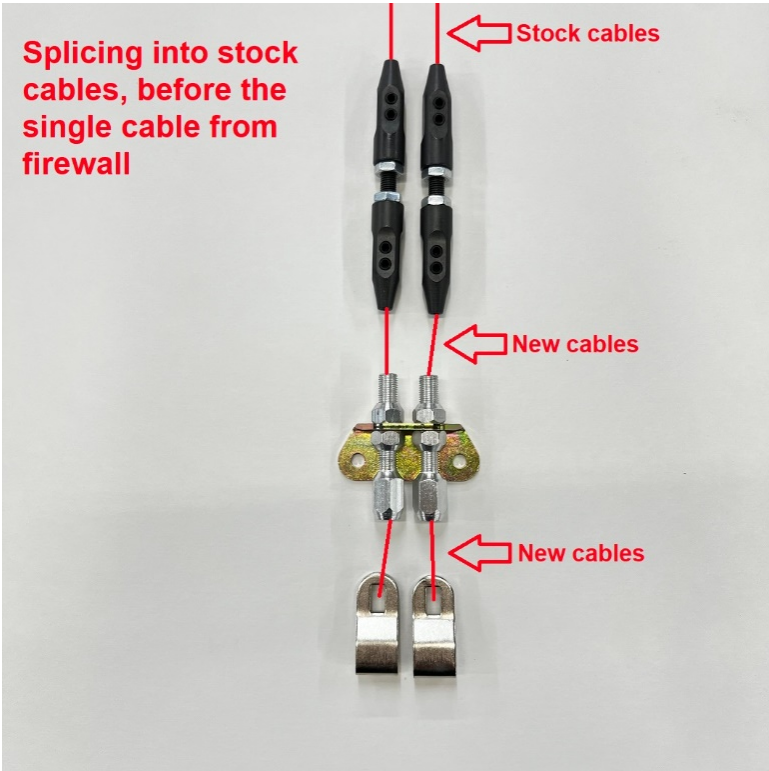

Installation Type 2:

Run each new rear wheel cable up to the factory junction point and use the included junction block. You will insert the stock single cable into the center of the block, then add the separate rear cables into the side of the block.

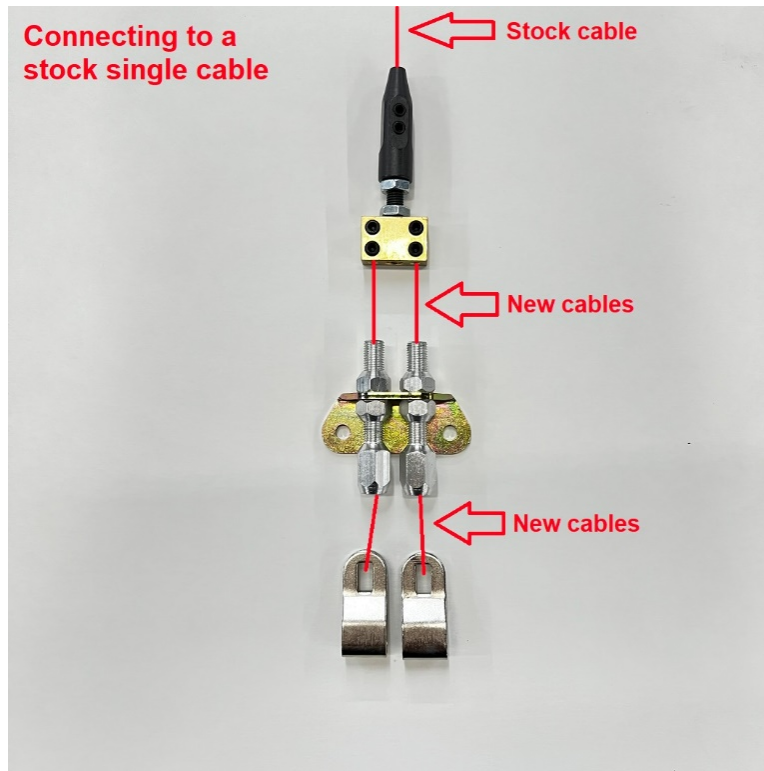

For any questions or suggestions please [CONTACT US](#)

